



HARRINGTON

**SUPER
MULTIPLE
JUNCTION**

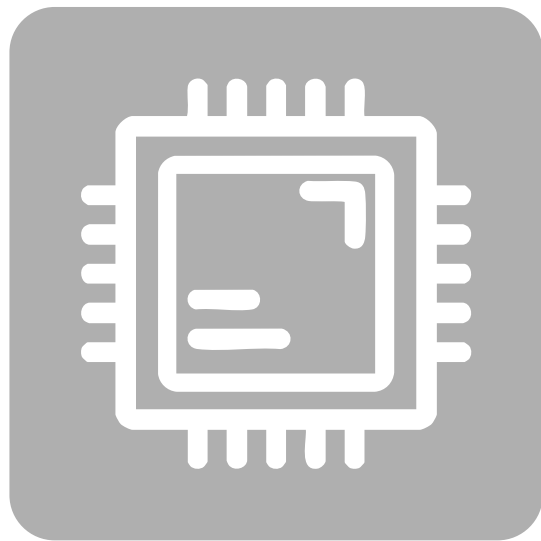

SUPER MULTIPLE JUNCTION (SMJ)

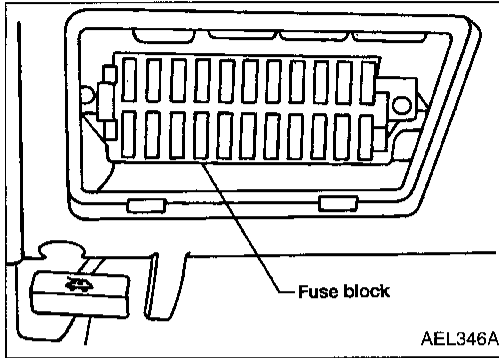


INSTALLATION

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

: 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:



Do not overtighten bolt, otherwise, it may be damaged.

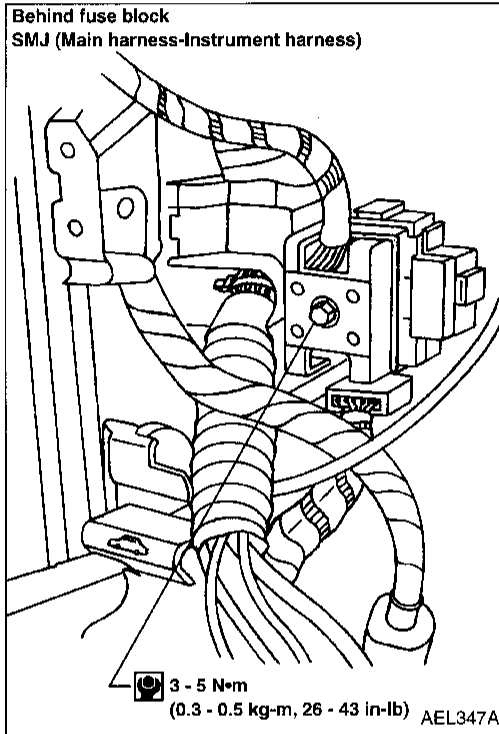

SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement


MAIN HARNESS

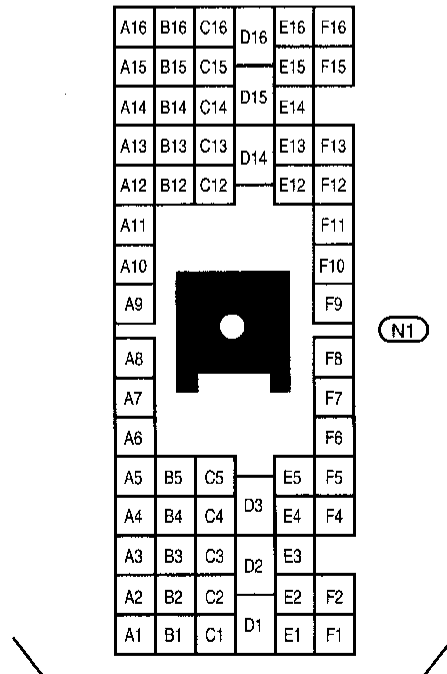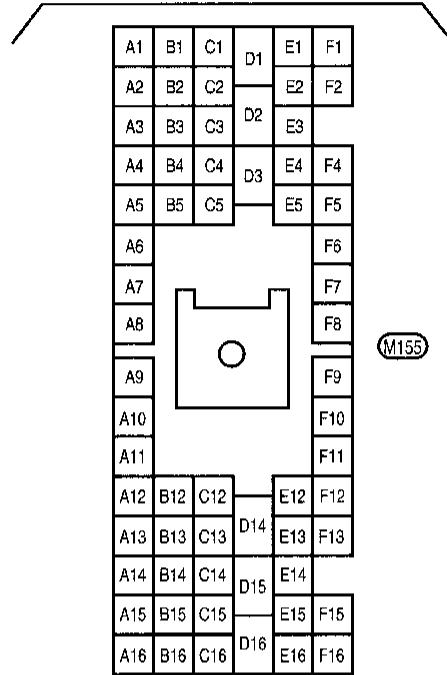

INSTRUMENT HARNESS


JOINT CONNECTOR (J/C)

Location

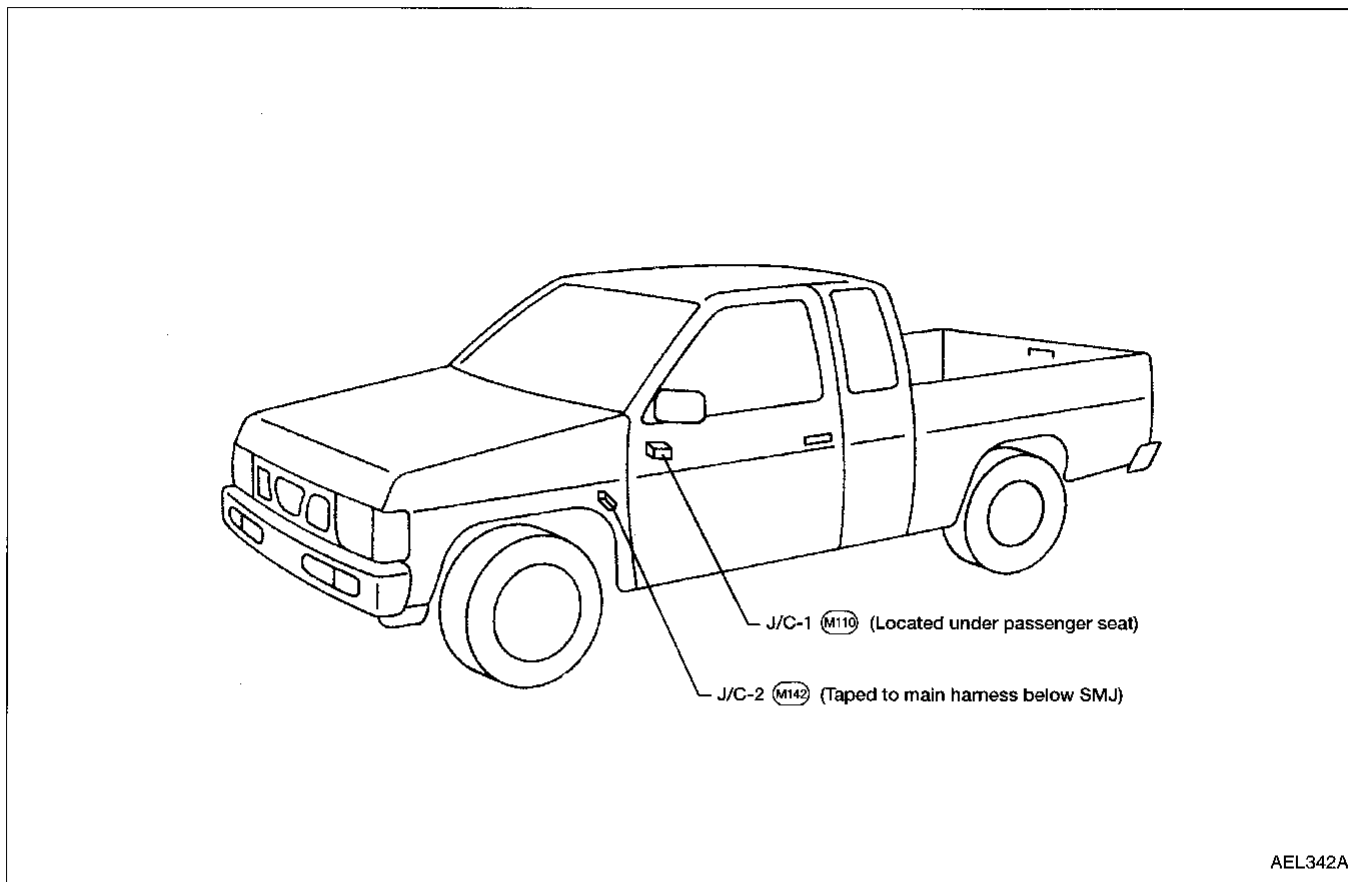

AEL342A


Terminal Arrangement

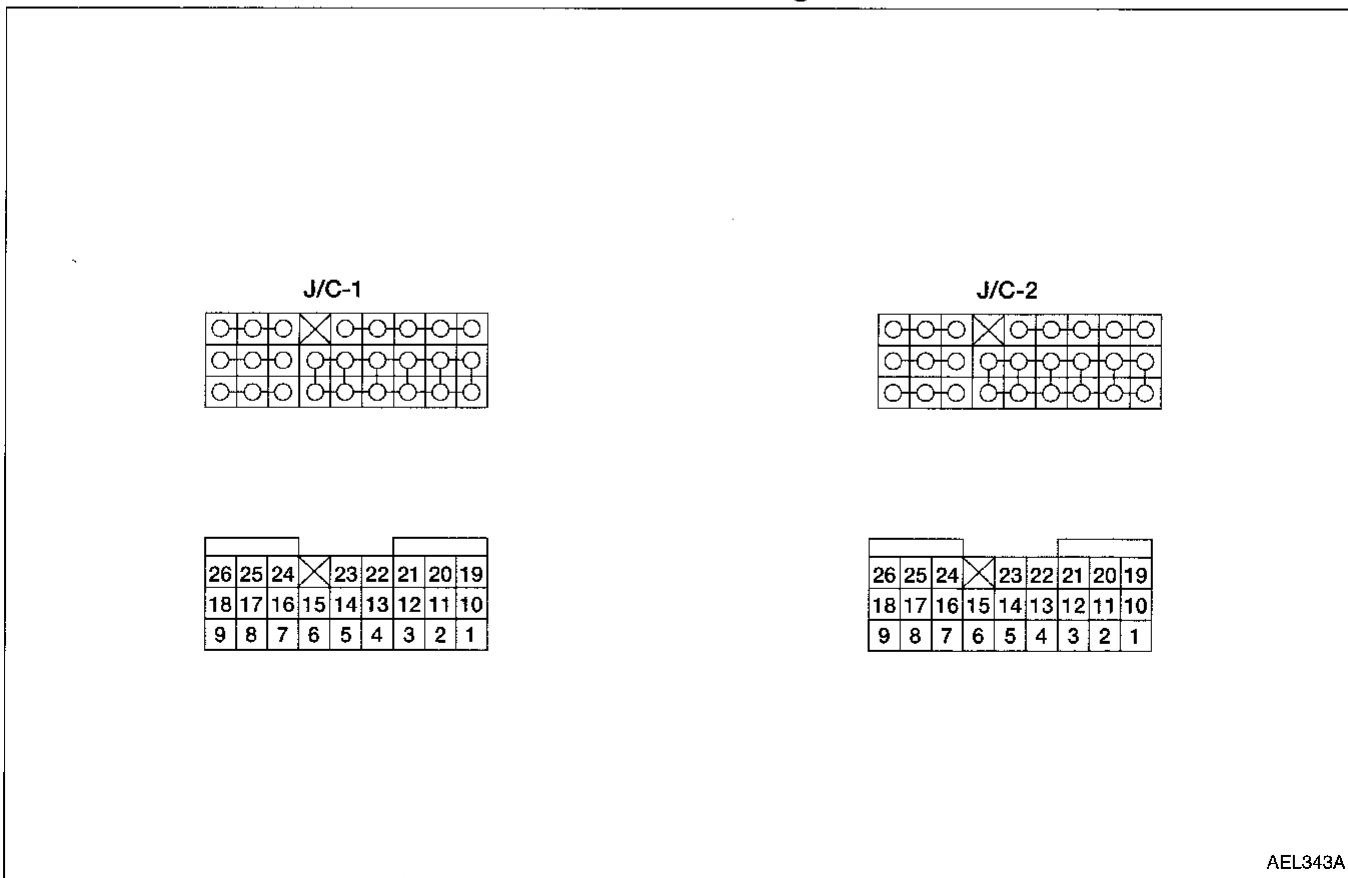

AEL343A


FUSE BLOCK

Fuse Arrangement

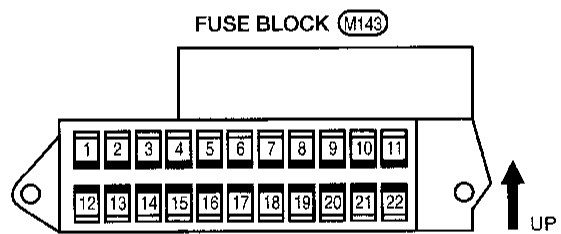


CONTROL UNITS/MODULE

 AIRBAG DIAGNOSIS SENSOR UNIT




View from harness side

 ABS CONTROL UNIT



View from harness side

ECM (ECCS CONTROL MODULE)

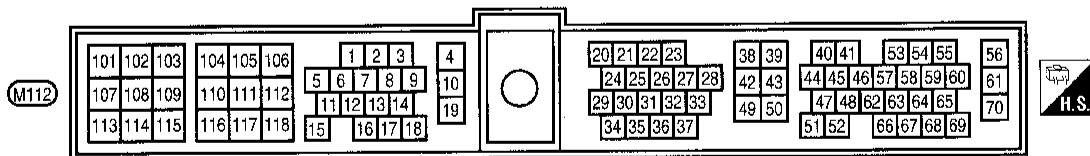

View from harness side